

Dismantling and recycling



The product has been designed and constructed using high-quality materials and components that can be recycled or re-utilised.

If a crossed-out wheeled bin is illustrated on a product, this means that the product satisfies the requirements of the 2012/19/EU European Directive.

Make inquiries about the disposal collection methods of electrical and electronic products in force in the zone in which the product must be disposed of.

Conform to the local norms regarding the disposal of waste materials and do not dispose of old products in normal domestic waste material. A correct dismantling and disposal of products helps to prevent environmental pollution and possible injury to health.

Abusive disposal of the product by the user implies the application of administrative fines foreseen by the norms in force.

EN

RADIA RANGE

Instruction Manual



COD. 01007-01 08/16



The equipment must be installed only by a specialised technician!
Read and apply that referred to the following pages before carrying out the installation.
Keep this manual in a safe place.

In case of incorrect or doubtful translation, only the Italian text applies (Translation of the original instructions).

Dear Customer,

the product you have purchased is a centrifugal fan for ducted discharge, suitable for wall or ceiling installations. To ensure optimum operation and guarantee a long life, read this manual carefully that explains how to effectuate a correct installation and to use and maintain the product properly. Following all the instructions ensures reliability and long life, both mechanically and electrically.

The manufacturer declines any responsibility for damages caused to persons or things deriving from the lack of observance of the following described instructions.

The product is constructed using state of the art technology and respects the standards in force regarding electrical equipment. It conforms with the EMC 2014/30/EU European Directive regarding radio interference suppression and electro-magnetic compatibility.

Installation and usage instructions



WARNING: Serious injury or death can be caused if these instructions are not applied!

- Do not use this product for uses that are different from those for which it has been designed.
- After removing the product from its packaging ensure that it is complete and undamaged; if in doubt, immediately contact a qualified electrician.
- Do not leave parts of the packaging within reach of children or incompetent persons. To dispose of the packaging and the appliance at the end of its useful life refer to the recycling norms in force in your country.
- Immediately contact a qualified person (authorised dealer or the manufacturer) if the product is dropped or knocked to check its correct functioning.
- Do not touch the appliance with wet or humid parts of the body (e.g., hands or feet).
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The means of disconnection from the supply mains must have a contact separation in all poles and must provide full disconnection under overvoltage category III conditions.
- If there is a combustible-fed device (water heater, gas boiler, etc. of the sealed chamber type) in the room where the product is to be installed check that the re-circulation of air is sufficient to ensure a good combustion for the correct functioning of these devices, precautions must be taken to avoid the back-flow of gases into the room from the open flue of gas or other fuel-burning appliances.
- To avoid the risk of fire do not using the product in the presence of inflammable substances and vapours, such as alcohol, insecticides, petrol, etc.
- The product can be connected to the supply mains only if the voltage and the frequency of the supply mains correspond to those written in the rating label.
- In the case of malfunction, anomaly or any type of fault disconnect the appliance from the electrical main supply and contact a qualified person. Use only original spare parts for repairs.
- The electrical system to which the appliance is connected must conform with the local norms in force regarding electrical systems.
- The appliance must not be used to activate water heaters, room heaters, etc.
- It is forbidden for the appliance to discharge air into hot air ducts used for the evacuation of fumes coming from the combustion of stoves or other combustion devices.
It must discharge directly outside the building.

WARNING: Damage can be caused to the device if the following instructions are not applied!

- Do not use the product at environmental temperatures more than 40°C.
- Do not leave the appliance exposed to atmospheric agents (rain, sun, snow, etc.). The possible applications of this product are illustrated in this manual.
- Do not immerse the appliance or parts of it in water or any other liquids.
- When cleaning or carrying out ordinary maintenance, check the integrity of the appliance.
- The flow of air or fumes that is conveyed by the appliance must be clean and free of greasy elements, soot, chemical/corrosive agents and inflammable or explosive mixtures.
- Do not obstruct the air inlet and outlet of the appliance in any way whatsoever. When using air ducting make sure that the ducting is not blocked.
- It is recommended to install it at a minimum height of 2.30 metres from the floor.
- For an optimum functioning of the appliance, it is necessary to ensure an adequate re-circulation of air in the room.

Consult the local norms with regards to this.

Mode of installation

Please refer to Fig. 1-2 for installation instructions.
The type of cable to be used is shown in Fig. 3.

Operation

Standard version: this fan is operated by means of a control switch (see wiring diagram Fig. 4a).

Pull-cord version: operated by pulling the cord. Pulling the cord again turns the fan off (see wiring diagram Fig. 4a)

Timer version: Please refer to Fig. 5a for adjustment of the timer. Turn the trimmer towards the "+" sign for a longer over-run period and for a shorter over-run period, turn towards the "-" sign. These models can either be wired via a LIGHT SWITCH (Fig. 4c), or via a REMOTE (ILLUMINATED) SWITCH (Fig. 4b). In both instances the fans will start to operate when the light or remote switch is switched on, and will continue to run via the timer for the pre-set overrun time after the fan is switched off.

Version with humidistat/timer: This version allows the operation of automatically via the humidistat/timer, supplied the terminals L-N (Fig.5a). It activates the fan when the relative humidity exceeds the preset value and continues its action until the moisture content was not reported below this threshold. The fan will stop its operation only after the preset time (the humidistat and timer settings are made by turning trimmer the Fig. 5a).The fan can also be activated manually by the REMOTE SWITCH (4b), LIGHT SWITCH (Fig. 4c) or PULL CORD. The fan activation with pull cord is indicated by the neon light. Manual operation is independent humidistat and acts as the timer version, with delayed switch-off.

Version with 2 speed (24h): The fan runs continuously at the minimum speed (24h). The fan is boosted to the maximum speed by means of REMOTE SWITCH (see Fig. 4b). Acting on the remote switch, the fan starts working immediately at maximum speed. When the remote switch is off, the fan will revert to the minimum speed.

Version with timer/humidistat, pull cord, 2 speed: This version allows the operation of automatically at the minimum speed via the humidistat/timer, supplied the terminals L-N (Fig.5a).

The fan operates automatically when the humidity reaches the pre-set level at the minimum speed and continues to run until any humidity in the air has fallen beneath the pre-set level and the timer has completed the over-run period.

When the fan is off or runs at the minimum speed, it can be boosted at the maximum speed by means of the pull cord switch, or the LIGHT SWITCH (Fig. 4c) or REMOTE SWITCH (Fig. 4b). The neon indicator shows when the fan work in maximum speed. Pulling the cord again or acting again on the LIGHT SWITCH or REMOTE SWITCH, the neon light is off, the fan reverts to the minimum speed and, after the overrun timer period, reverts to the automatic operation to its stand-by position or at the minimum speed.

WARNING: If the level of Relative Humidity in the room is superior to the pre-set one, the automatic running has the priority on the manual one. Therefore, it will not be possible to switch off the fan through the switch.

Troubleshooting

PROBLEM	CAUSE AND REMEDY
The appliance does not switch on	There is no voltage. Check the main switch and/or the electrical connections.
The impeller does not turn	Check that its movement is not slowed down.


Ordinary maintenance and cleaning

Before carrying out any maintenance or cleaning operations, disconnect the mains electrical supply.

Clean the front cover and the external shutters with a cloth.

Maintenance and cleaning must only be carried out by qualified personnel

- Remove the front cover (Fig. 1 - nr. 2).
- Clean the front cover with a neutral detergent or water.
- Remove the filter and wash it if it is clogged (Fig. 1 nr. 3) with neutral detergent and be sure it is dry before re-assembling.
- The motor-fan assembly should be cleaned with a dry brush or dry cloth. Ensure that it does not come into contact with any kind of liquid or solvent. If this should accidentally occur, contact a qualified technician before re-assembling the fan.
- Electrical parts cannot be cleaned.

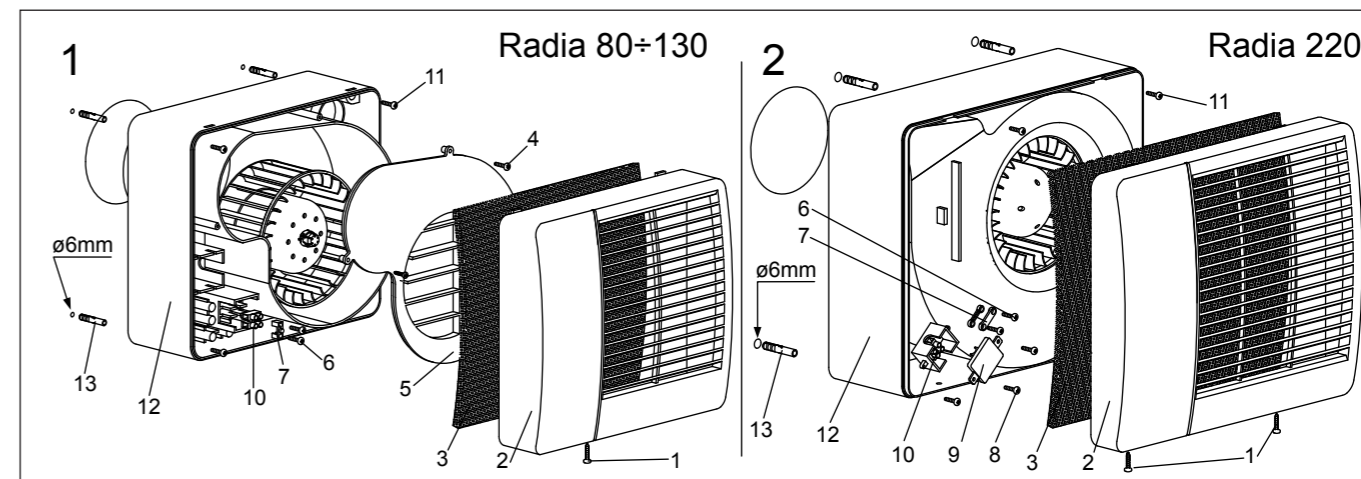

LEGEND

- | | | |
|------------------------------|-------------------------------------|------------------------|
| 1. FRONT COVER FIXING SCREWS | 6. CABLE CLAMP SCREWS | 11. WALL FIXING SCREWS |
| 2. FRONT COVER | 7. CABLE CLAMP | 12. HOUSING |
| 3. FILTER | 8. FIXING SCREWS FOR TERMINAL COVER | 13. FISCHER |
| 4. VOLURE COVER SCREWS | 9. TERMINAL COVER | |
| 5. VOLURE COVER | 10. TERMINAL | |

